


Końcówki kablowe do NO22/N036-FOTO



Kabel N6.
Nikon D70s/D80



Kabel N8.
Nikon
N90s/F5/F6/F100/F90/F90X/D1/D1H/D1X/D2/D3/D2H/D2Hs/D2X/D2Xs
D200/D300/D700/D800/D810
Kodak
DSC-14N/Fuji S3 Pro/Fuji S5 Pro

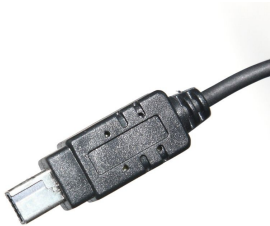

Kabel N10 (MC-DC2).
Nikon
D90/D600/D610/D750/
D3100/D3200/D3300/D3400/D5000/D5100/D5200/DD5300/D5500/D5600
D7000/D7100/D7200 /D7700/D7800



Kabel C6.
Canon
EOS 30/33/50/60D/70D/80D/100D/300/300D(Digital Rebel)/350D(Rebel
XT)/400D(Rebel XTi)/450D(Rebel XSi)/500D/550D/1000D(Rebel
XS)/600D/650D/ 700D/750D/760D/ 1100D/1300D/3000N/5000/1200D/EOS RP
Samsung GX-1S/GX-1L/GX-10/GX-20 *Pentax* K1/K110D/K100D/K200D



Kabel C8.
Canon
EOS 1V/3/1D/1Ds/1DS Mark II/1Ds Mark III/1D Mark II/1Ds Mark III
10D/20D/30D/40D/50D/5D/5DMkII/6D/7D/5DMkIII/5DS/5DSR



Kabel S6.
Sony
A33/A35/A55/A65/A77/A100/A200/A300/A350/A450/A500/A700/A850/A900,
Minolta Dynax 7D/5D/Dynax 9, 7,5, 4, 3 Dynax 807si, 800si, 700si, 600si, 505si



Kabel S2
Sony
Alpha A7, A7 II, A7 III, A7R, A7S, A58, A3000, A3500, A5000, A5100,
A6000, DSC-RX100II, RX100III, HX300, HX50V, HX60V, NEX-3NL



Kabel O6

Olympus

E510/ E520/ E400/ E410/E420/ SP-570 UZ/SP-560 UZ/ SP-550 UZ/ SP-510 UZ/ RM-UC1



Kabel P6

Panasonic

FZ20 (s,k), FZ30 (s,k), FZ50 (s,k), FZ100K, FZ150K, FZ200K, G1K, G10K, G1A, G1R, G2K, G2R, G2A, G3KT, G5KBODY, G5KK, G5KKCP, G6KK, G10GF1C-K, GF1K-K, GF2, GF3, GH1K, GH2S-BODY-ONLY, GH2K-BODY-ONLY, GH2KS, GH2HK, GH2KK, GH3KBODY, GX1SBODY, GX1KBODY, GX1KK, GX1XS, GX1KS, GX1XK, GX7KS, GX7SBODY, TS2A, TS2D, TS2S, TS2Y, GH4 DMC-G7, DMC-G70



Kabel R2

Fuji

GFX 100, GFX 50R, GFX 50S, X-H1, X-Pro2, X-T3, X-T2, X-T1, X-T20, X-T10, X-T100, X-E3, X-E2S, X-E2, X-A5, X-A10, X100F

Jeśli wybranego aparatu nie ma na liście proszę zapytać.